TEAC

PCD807

Portable CD Boombox

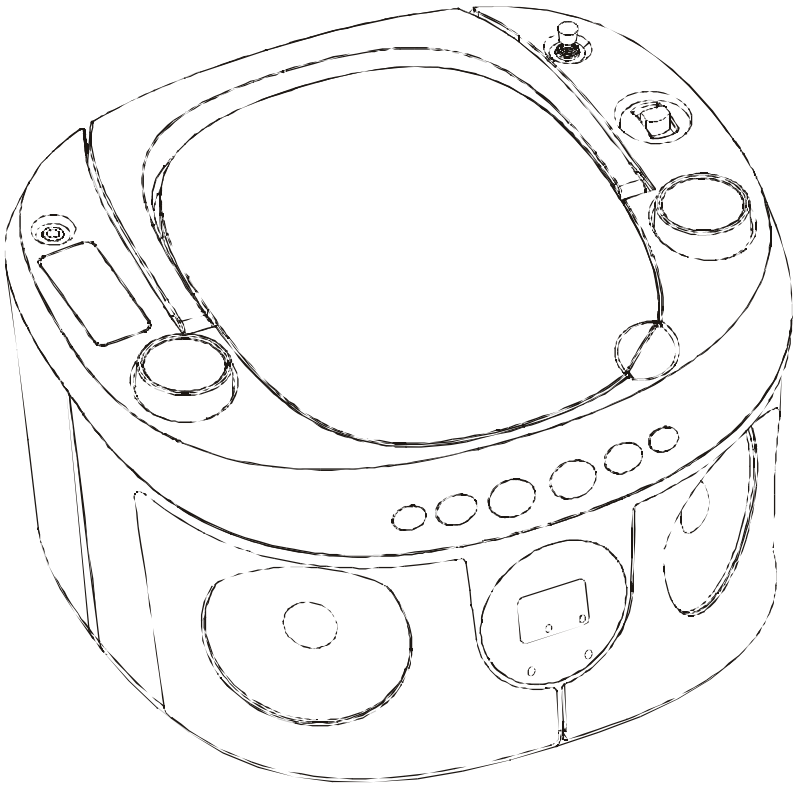

USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au

TEAC WARRANTY PROCEDURE

v1.5.2: DEC 2011

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Customer Support Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name

Owner's Address

Postcode

Model Name/No. Serial No.

Dealer's Name

Dealer's Address

Postcode

Authorised Service Centres in Major Australian Cities

NSW
151 Arthur Street
Homebush West, NSW 2140

Queensland
Unit 1, 320 Curtin Ave West
Eagle Farm, QLD 4009

Western Australia
Unit 2, 50 Pilbara Street
Welshpool, WA 6106

South Australia
11 McInnes Street
Ridleyton, SA 5008

Victoria
282 Normanby Road
South Melbourne, VIC 3205

Thank you for selecting a TEAC product.

If you should require assistance with your product regarding its setup or operation, or if any difficulties arise, please call us directly for advice between Monday to Friday at 8.30AM – 6PM AEST at the

TEAC Customer Support Hotline

1300 553 315

teacservicesupport@awa.com.au

www.teac.com.au

TEAC WARRANTY INFORMATION

v1.5.2: DEC 2011

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty Terms & Conditions

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased, used and serviced in Australia.

2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.

3. Refund or replacement via your retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.

4. Subject to the terms herein, this warranty effectively covers the equipment as specified in the Warranty Periods Table below from the date of purchase.

TEAC PRODUCT	WARRANTY PERIOD
LED/LCD TV 32" (80 cm) and above	1 Year (In-Home Service/ Pick up Available)*
All other TEAC products	1 Year (Carry-in Service)

5. In Home Service/Pick up* Service

   This service will only be provided as part of this warranty if all the following conditions are met;
   a) The product is indicated in the Warranty Period Table.
   b) The product is within the warranty period.
   c) The product is located within the normal service area of the local TEAC Authorised Service Centre.

   If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

   Carry-in Service

   Where In-Home service/Pick up* is not available, the purchaser is required to send the product to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remote, Power Adaptors and Cables.

7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.

8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.

9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features & specifications.

10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.

11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.

12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
    a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
    b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
    c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product.

13. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.

14. TEAC reserves the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.

15. LCD dead pixel policy, please contact TEAC Customer Support Hotline on 1300 553 315 for assistance.

SAFETY PRECAUTIONS

WARNING

* The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shalll be placed on apparatus.
* A minimum distance of 5cm should be left arround the apparatus for sufficient ventilations.
* No naked flame sources such as lighted candles should be placed on the apparatus.
* When replacing the battery, be sure to dispose of the old one in accordance with the current regulations. To this end, deposit it at a point which has been provided for this purpose, in order that it will be disposed of in a safe and environmentally-friendly way.
* The apparatus can be worked regularly between 10 to 40°C.
* To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
* The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
* Excessive sound pressure from earphones and headphones can cause hearing loss.
* The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

NOTE

Main plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended used. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.
In case of malfunction due to electrostatic discharge, just reset the product (reconnection of the power source may be required) to resume normal operation.

IMPORTANT

Since the CD circuitry may cause interference to other radio tuners nearby, switch this unit off when not in use or move it away from the affected radio tuner.

The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CLASS 1 LASER PRODUCT

CAUTION
INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM.

DANGER

This product contains a low power laser device.

LASER SAFETY

This unit employs an optical laser beam system in the CD mechanism, designed with built-in safeguards. Do not attempt to disassemble, refer to qualified service personnel.
Exposure to this invisible laser light beam may be harmful to the human eye.

THIS IS A CLASS-1 LASER PRODUCT. USE OF CONTROLS, OR ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS LASER LIGHT BEAM EXPOSURE.

The marking plate is indicated on the back side of the unit.

CONTROL PANEL OVERVIEW

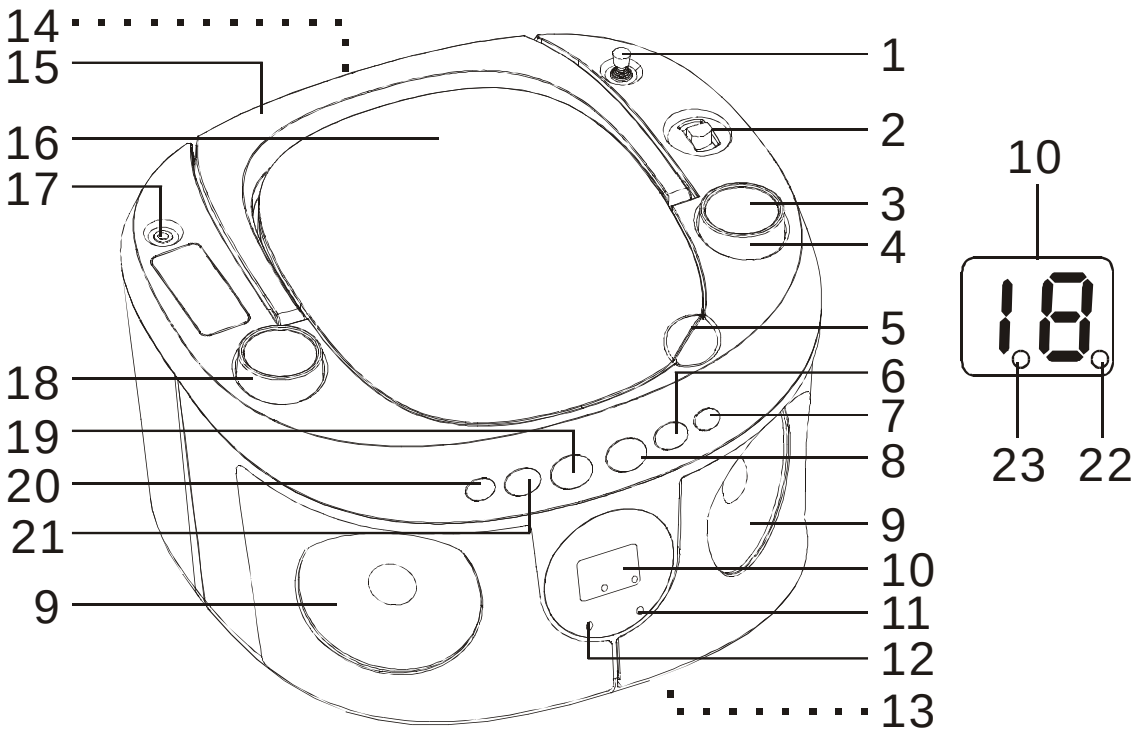

1. FM ANTENNA
2. FUNCTION SWITCH
3. DIAL SCALE
4. FM/AM RADIO TUNING KNOB
5. CD DOOR LEVERAGE
6. SKIP UP / FAST FORWARD BUTTON
7. REPEAT BUTTON
8. PLAY/PAUSE BUTTON
9. SPEAKERS
10. CD TRACK DISPLAY
11. PROGRAM INDICATOR
12. ON INDICATOR
13. BATTERY COMPARTMENT (AT THE BOTTOM)
14. AC SOCKET (AT THE BACK)
15. HANDLE
16. CD DOOR
17. AUX IN JACK
18. VOLUME KNOB
19. STOP BUTTON
20, PROGRAM BUTTON
21. SKIP DOWN / FAST REWIND BUTTON
22. REPEAT INDICATOR
23. PLAY INDICATOR

POWER SOURCE

Battery Installation

1. Open the Battery Compartment cover by pushing the catches downwards.
2. Install 6 x C size batteries (not included) securely, following the +/- polarities indicated in the battery compartment.
3. Close the Battery Compartment with the cover.

NOTE: Please dispose of used batteries in an environmentally responsible manner.

AC Power Operation

1. Connect the power cord receptacle to the AC Socket on the unit, and the plug to an AC power outlet.
2. Turn on the power supply at the AC power outlet.

CAUTION: Please turn off the power supply at the AC power outlet while making or changing plug connections.

UNIT OPERATION

Radio Operation

1. Push the Function Switch to the AM or FM position. The ON indicator will light up.
2. Tune into a desired station by turning the Tuning Knob.
3. For FM radio, extend the antenna and adjust the direction, length and angle to find the best reception.
4. For AM radio, rotate the unit to find the best reception.
5. Adjust the Volume Knob for your desired listening level.
6. To turn off the radio, push the Function Switch to the OFF position.

Loading a CD

1. Push the Function Switch to the CD position. The ON indicator will light up.
2. Use your fingertip to open the CD Door. Place a CD (with the printed label facing upward) firmly into the compact disc compartment and close the CD Door..
3. The CD Track Display will show the total number of tracks after a few seconds.
4. "no" will be displayed when there is no CD inside the CD compartment.

NOTE: This unit can play normal audio CDs, CD-R and CD-RW discs.

CD Playback Controls

PLAY/PAUSE BUTTON

- After a CD is loaded, press to start playing the CD. The CD Track Display will show the first track and the PLAY Indicator will light up.
- Press during CD playback to pause. The PLAY Indicator will flash while playback is paused. Press again to resume playing from where the audio was paused.

STOP BUTTON

Press once to stop playing the CD.

SKIP UP / SEARCH FORWARD BUTTON

Press once to skip to next track. Press and hold to search for a desired position at high speed forward. Release the button to resume normal play.

SKIP DOWN / SEARCH BACKWARD BUTTON

Press once to skip back to the beginning of the current track. Press repeatedly to go to previous track. Press and hold to search for a desired position at high speed backward. Release the button to resume normal play.

REPEAT BUTTON

- Press once to turn on single track repeat playback. The REPEAT Indicator will flash while in this mode.
- Press twice to turn on repeat playback for all tracks. The REPEAT Indicator will be lighted up continuously while in this mode.
- To turn off repeat playback, press the REPEAT Button once or twice until the REPEAT Indicator turns off.

To remove the CD from the unit, press the STOP Button, open the CD Door and take out the CD.

To turn off CD playback, push the Function Switch to the OFF position.

Programmed CD Playback

Play tracks in a chosen order by programming a playlist of up to 20 tracks.

1. Press the PROGRAM button. The PROGRAM indicator and "01" will flash on the display.
2. Press the SKIP UP/FAST FORWARD and/or SKIP DOWN/FAST REWIND Buttons to select the desired track number.
3. Press once the PROGRAM Button again to memorize the track.
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press the PLAY / PAUSE Button to start playing. The PROGRAM Indicator will light up.
6. When needed, press the STOP Button to stop programmed playback. Press the PLAY/PAUSE Button to resume programmed playback.

Open the CD Door or turn off CD playback to clear the programmed playlist. When in stop mode, pressing the STOP Button clears the program playlist also.
NOTE: Programming can only be made when the CD player is in stop mode.

Aux In

1. To listen to an external audio source equipped with an auxiliary audio output jack, such as an MP3 player or smartphone, you need a stereo aux cable with 3.5mm plugs (not included).
2. Connect one end of the aux cable into the output jack on the audio source unit, and the other end into the AUX IN Jack on this unit.
3. Play the audio source.
4. Push the Function Switch to AM, FM or RADIO positions. The ON indicator will light up.
5. You can now listen to audio from the audio source through the unit. Adjust the Volume Knob for your desired listening volume. Control media playback on the audio source unit directly.
6. To turn off the unit, set the Function Switch to the OFF position.

NOTE: Always unplug the 3.5mm plug cable from the unit after use.

CARE AND MAINTENANCE

Caring for Compact Discs

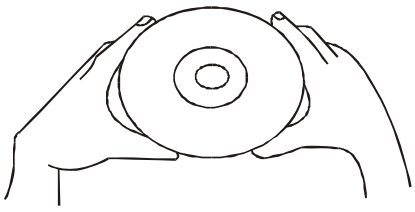

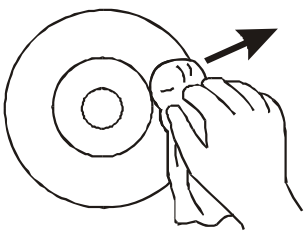

* Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to come in contact with the shiny, unprinted side of the disc.
* Do not attach adhesive tape, stickers, etc. to the disc label.
* Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
* If a disc skips of gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
* When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.
* This unit is designed to play only Compact Discs bearing the identification logo as shown here.

COMPACT
disc
DIGITAL AUDIO

* Other discs may not conform to the CD standard and may not play properly.
* Compact Discs should be stored in their cases after each use to avoid damage.
* Do not expose Compact Discs to direct sunlight, high humidity, high temperatures, or dust, etc. Prolonged exposure or extreme temperatures can wrap the disc.
* Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink may damage the surface.

SPECIFICATIONS

Power Consumption	:	AC ~ 230V 50Hz, 6W
		6 x C Size Batteries (batteries not included)
Power Output	:	0.8W RMS per channel
Frequency Range	:	FM 87.5-108 MHz
		AM 522-1620 kHz
Frequency Response	:	CD - 125 Hz - 15000 Hz
Dimensions	:	223(L) x 201(D) x 126(H) MM
Weight	:	1.2 kg

*Weight and dimensions are approximate

*Specifications may change without prior notice.

TEAC

TEAC CUSTOMER SUPPORT HOTLINE (TCS)

1300 553 315

Between Monday to Friday – AEST 8:30AM to 6PM